 


Pedalboard Manual | VERB:Split

Description

Split reverb created by combining Freaked Prefreak and Freaktail plugins. There is a chorus, tremolo and phaser in between the two parts of the reverb, opening up a world of sci-fi reverbs. There are also added mix and bypass controls which control the full effects chain.


Signal Chain

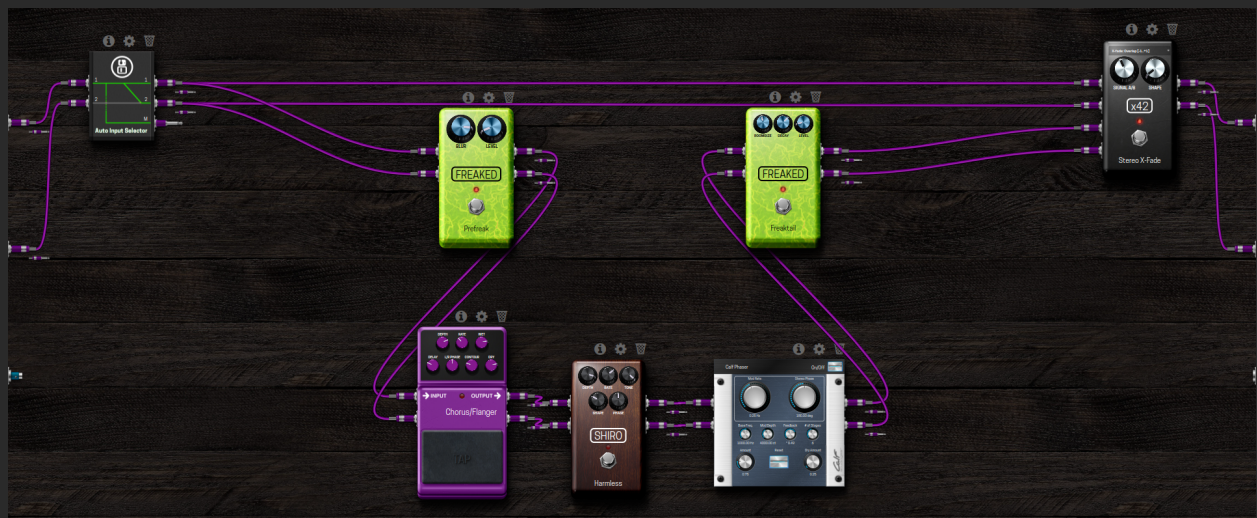

Snapshots

Slow Swirl	Sci-fi soundscape with a slow phaser and medium-long reverb
Bouncy Swirl	High depth tremolo with a slow phaser and medium-long reverb
Short Vibe	Short reverb with a slow phaser, giving a univibe type sound
Hesitant Grains	A bit glitchy when playing plucked, lush and smooth when playing sustained, very low amount of blur but very long tail
Gran-Chorus	A smooth and fat sounding medium-long reverb with chorus
Slap Room	Short reverb with audible repetitions, chorus on
Slight Perc	Short reverb with chorus and a slightly percussive sound due to the rapid tremolo with a snappy shape

 Sections

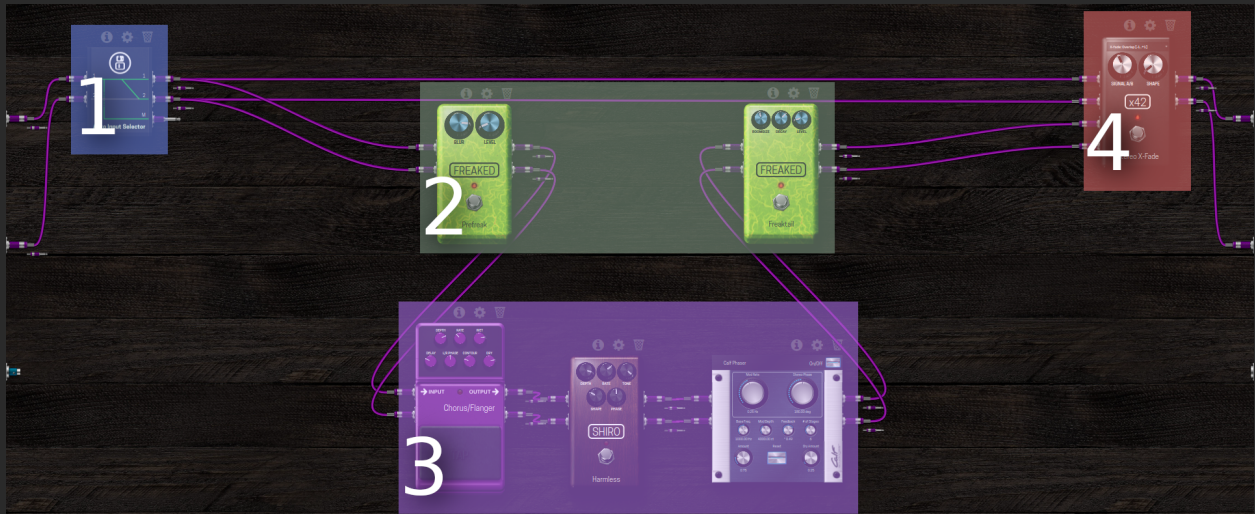

- 1 Automatic input signal selector, making the pedalboard automatically work well with both mono and stereo input signals
- 2 The core two plugins in the pedalboard: the Freaked Prefreak and Freaktail
- 3 The added fx in between the split up reverb: the TAP Chorus/Flanger, SHIRO Harmless, and Calf Phaser
- 4 The added mix and bypass controls, courtesy of the x42 Stereo X-Fade

Controller Addressings

Page 1: Prefreak, Freaktail and Chorus

Footswitches

- | | |
|------------|---------------------------------------------------------------------------|
| Split Verb | Press to toggle the full effect chain on/off |
| Chorus | Press to toggle the Chorus on/off, only works when [Split Verb] is active |

Knobs - I

- | | |
|----------|--------------------------------------------|
| Mix | Sets the mix of the full effects chain |
| Blur | Sets the amount of Blur of the Prefreak |
| Blur Lvl | Sets the level of the Blur of the Prefreak |

Knobs - II

Decay	Sets the decay of the Freaktail
Roomsize	Sets the room size of the Freaktail
Tail Lvl	Sets the level of the tail of the Freaktail

Knobs - III

C.Rate	Rate of the Chorus effect
C.Depth	Depth of the Chorus effect
C.Contou	Contour of the Chorus effect

Page 2: Harmless and Phaser

Footswitches

Harmless	Press to toggle Harmless on/off, only works when [Split Verb] is active
Phaser	Press to toggle the Phaser on/off, only works when [Split Verb] is active

Knobs - I

H.Rate	Rate of the Harmless (tremolo) effect
H.Depth	Depth of the Harmless (tremolo) effect
H.Shape	Shape of the modulation wave of the Harmless (tremolo) effect

Knobs - II

P.Rate	Rate of the Phaser effect
P.Depth	Depth of the Phaser effect
P.Center	Center frequency of the Phaser effect

About

Version	1.0
Designed for	MOD Dwarf
Release date	8-2-2023
Pedalboard by	Jesse Verhage
Snapshots by	Jesse Verhage